



Schlage L-Series


























Universal Transformation Instructions



Schlage
111 Congressional Blvd. Suite 200
Carmel, IN 46032
Tel 800.847.1864
Fax 800.452.0663
www.schlage.com



Schlage L-Series Universal Transformation Instructions*

ANSI Function	Function Type	Function Description	Transformation Instructions	Additional Part(s)
F04	 L9050 (w/thumbturn) Office	Latchbolt operated by lever either side except when outside lever is made inoperative by a stop or other mechanical means other than key. When outside lever is locked, latchbolt is retracted by key from outside or by operating inside lever. Auxiliary deadlatch.	Install clover leaf cam cylinder on outside, install thumbturn assembly 09-509-027 on inside.	No Additional Parts Required
F01	 L9010 Passage	Latchbolt operated by lever from either side at all times.	Do not install thumbturn unit 09-509-027 on inside or cylinder outside. Install chassis in the unlocked position.	No Additional Parts Required
F05	 L9070 Classroom	Latchbolt operated by lever either side except when outside lever is locked from outside by key or push button mechanism. When outside is locked latchbolt is retracted by key or by operating key or push button and outside lever from outside or by operating inside lever. Auxiliary deadlatch.	Install clover leaf cam cylinder on outside, do not install thumbturn assembly 09-509-027 on inside.	No Additional Parts Required
F07	 L9080 Storeroom	Latchbolt operated by key outside or by operating inside lever. Outside lever always inoperative. Auxiliary deadlatch.	Do not install thumbturn unit 09-509-027 on inside. Install chassis in the locked position. Replace clover leaf cam L583-153 with straight cam B502-948 (classic), L583-255 with K510-680 (IC and SFIC) and install on outside.	Cams B502-948 (classic), K510-680 (IC and SFIC)  
F09	 L9060 Apartment Entrance	Latchbolt operated by lever either side, except when made inoperative by key from inside. When outside is locked latchbolt is retracted by key from outside or by operating inside lever. Auxiliary deadlatch.	Do not install thumbturn unit 09-509-027 on inside. Install clover leaf cam cylinder on inside. Replace clover leaf cam L583-153 with straight cam B502-948 (classic), L583-255 with K510-680 (IC and SFIC) and install on outside.	Mortise cylinder assembly and Cams B502-948 (classic), K510-680 (IC and SFIC)   
F31	 L9080 (less outside lever and cylinder) Exit or Communicating	Latchbolt operated by inside lever. Non-removable blank trim or no trim outside.	Do not install thumbturn unit 09-509-027 on inside. Install chassis in the locked position. Install inside lever with L285-150 mounting plate, do not install outside lever or cylinder.	Mounting plate L283-150 
F32	 L9071 Classroom Security	Latchbolt retracted by lever either side except when outside lever is locked by key from inside or outside. When outside lever is locked latchbolt is retracted by key either side or by inside lever. Auxiliary deadlatch.	Do not install thumbturn unit 09-509-027 on inside. Install clover leaf cam cylinder on inside and outside.	Mortise cylinder assembly and Cam L583-153  
	 L9080 (less outside lever) Service	Latchbolt operated by key outside or by operating inside lever. No outside lever. Auxiliary deadlatch.	Do not install thumbturn unit 09-509-027 on inside. Install chassis in the locked position. Replace clover leaf cam L583-153 with straight cam B502-948 (classic), L583-255 with K510-680 (IC and SFIC) and install on outside. Install inside lever with L285-150 mounting plate, do not install outside lever.	Cams B502-948 (classic), K510-680 (IC and SFIC), Mounting plate L283-150   
	 L9080 (less inside trim) Utility	Latchbolt retracted by key outside, outside lever always inoperative. No inside trim. Auxiliary deadlatch.	Do not install thumbturn unit 09-509-027 on inside. Install chassis in the locked position. Replace clover leaf cam L583-153 with straight cam B502-948 (classic), L583-255 with K510-680 (IC and SFIC) and install on outside. Install inside lever on outside with L283-150 mounting plate, do not install inside lever.	Cams B502-948 (classic), K510-680 (IC and SFIC), Mounting plate L283-150   
	 L9070 (less inside trim) Closet	Latchbolt operated by lever on outside except when outside lever is locked from outside by key. When outside is locked latchbolt is retracted by key or by operating key from outside lever. Auxiliary deadlatch.	Install clover leaf cam cylinder on outside, do not install thumbturn assembly 09-509-027 on inside. Install inside trim on outside with L283-150 mounting plate.	Mounting plate L283-150 

*Assumes Everest cylinders and L9050 as base function (L283-133 Chassis/L9050LB Distributor Lock Case) – Only applies to sectional trim (not Escutcheon)